 


Anti-Vibration Pads

Protect your floors and reduce noise

ULX202

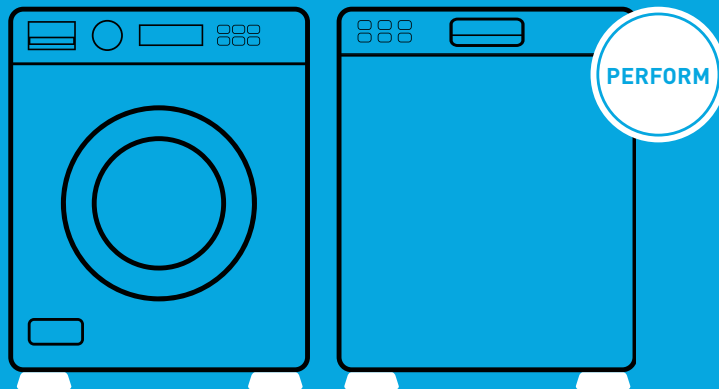

 
DESCRIPTION

The Unilux anti-vibration pads help absorb the vibrations from your appliance and keep it firmly on the floor, protecting it from scratches. Vibration pads are W 57/65mm x H 20mm in dimensions.



CONTENTS

- 4 x pads in each pack. 65mm in diameter

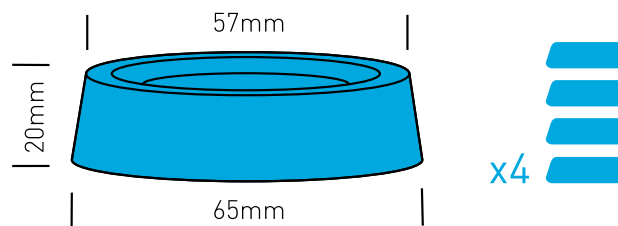

SUITABLE FOR MOST WASHERS, DRYERS & DISHWASHERS

TIPS/ FEATURES

- Reduces noise & vibration of your machine.
- Reduced movement of your machine protects your floors.
- Place the vibration pads under the feet of your machine to reduce movement which can cause damage to floors and noise during machine operation.
- Quick and easy installation. Suitable for Front Load washers, Top Load washers, Dryers & Dishwashers

INSTALLATION

- Ensure the appliance is level (screwing the feet) before placing the pads beneath.

GET IN TOUCH WITH US

For more information on all UNILUX accessories, phone or email our customer care teams

AUSTRALIA

1300 363 640
customer@electrolux.com.au
uniluxaccessories.com.au

NEW ZEALAND

0800 234 234
customer@electrolux.co.nz
uniluxaccessories.co.nz